


取扱説明書

PC100USB

ボリューム コントローラー

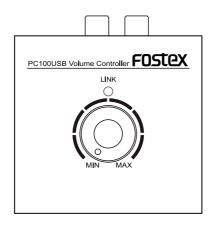

安全上のご注意

ここでは、安全に関する項目について記載しています。あなたや他の人々へ与える危害や、財産などへの損害を未然に防止する ため、ここに記載されている事項をお守りいただくものです。ご使用の前に必ずお読みください。



この表示とともに記載されている事項を無視して、誤った取り扱いをすると、 人が死亡または重傷を負う可能性が想定される内容を示します。



この表示とともに記載されている事項を無視して、誤った取り扱いをすると、 人が傷害を負ったり、物的損害の発生が想定される内容を示します。

さらに、各項目ごとに「図記号」を使用しています。これらの「図記号」は、つぎのような意味を表わしていますので、 意味をよくご理解の上お読みください。


図記号の例



△記号は、注意しなければならない内容(警告を含む)を示しています。 具体的な注意内容は△の中や近くに絵や文章で示しています。 左図の場合は「感電注意」を示しています。




○記号は、禁止内容(してはならないこと)を示しています。具体的な禁止内容は






●記号は、強制内容(必ずすること)を示しています。 具体的な注意内容は●の中や近くに絵や文章で示しています。 左図の場合は「一般的な指示」を示しています。

万一煙が出ている、変なにお いや音がするなどの異常状 態のまま使用すると、火災・ 感電の原因となります。すぐ にUSBケーブルを外してくだ





万一機器を落としたり、カバ ーを破損した場合には、USB ケーブルを外し、販売店また は弊社営業窓口へご連絡く ださい。そのまま使用すると 火災・感電の原因となります。




機器本体に直接水のかかる 場所では使用しないでくださ い。火災・感電の原因となりま す。特に屋外での使用(雨天、 降雪時、海岸、水辺)にはご注 意ください。




本機の分解・修理・改造は絶 対にしないでください。また、 カバーは絶対に外さないでく ださい。火災・感電の原因とな ります。



本機の上に花瓶、コップや水 などの入った容器、小さな金 属物を置かないでください。 水がこぼれたり、中に入った りした場合、火災・感電の原 因となります。







油煙や湯気の当たるような 場所に置かないでください。 火災・感電の原因となること があります。



湿気やホコリの多い場所に 置かないでください。火災・感 電の原因となることがありま す。



ヘッドホンを装着した状態で パソコンを起動しないでくだ さい。またヘッドホンを使用 するときは、音量を上げすぎ ないでください。

目 次 安全 トのご注意J-2 本機の概要.....J-3 付属品J-3 本機の電源.....J-3 各部の名称と機能 トップパネル.....J-4 接続例J-5 パソコンの条件J-5 パソコンの設定 出力装置設定 Windows Vista/Windows 7...J-6 詳細設定 Windows Vista/Windows 7...J-7 出カレベル設定J-7 仕様

一般......J-7 アフターサービスについてJ-8

無償修理規定について.....J-8

保証書J-8

はじめに

このたびはフォステクス製品をお買い上げいただき、誠にありがとうございます。 ご使用いただく前に、この取扱説明書をよくお読み

で使用いただく前に、この取扱説明書をよくお読みください。なお、取扱説明書は必要に応じてお読みいただけるよう、大切に保存してください。

本機の概要

本機は、フォステクス PM0.4n などのパワードモニター (あるいはオーディオシステム) やヘッドフォンでパソコンの音声を聴く際に、手元で音量を調整できるボリュームコントローラーです。

USB 端子を通して本機に入力されたパソコンのデジタルオーディオ出力信号は、本機内蔵の DA コンバーターでアナログオーディオ信号に変換され、ボリュームつまみで音量調節された後、ライン出力端子およびヘッドフォン出力端子から出力されます。

<注意>: ご使用の際、オーディオ機器の音量を上げすぎないようご注意ください。 聴覚に悪い影響を与えることがあります。

付属品について

本機には以下の付属品が同梱されています。

- ●USB ケーブル×1
- ●RCA ピンケーブル ×2
- ●取扱説明書(本書)×1


お買い上げ後、付属品が揃っていることを確認して ください。

本機の電源

本機は、USB接続したパソコンから供給される USBバスパワーを電源として使います。

各部の名称と機能

トップパネル

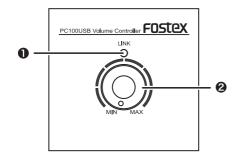


● [LINK] インジケーター

付属の USB ケーブルを使って本機とパソコンが接続され、パソコンが本機を正しく認識しているときに点灯します。

2 ボリュームつまみ

本機の出力レベルを調節します。[PHONES] 端子と [OUTPUT] 端子の両方に対して働きます。

リアパネル

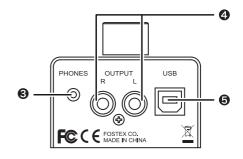

③ [PHONES] 端子(ステレオミニジャック) ステレオヘッドフォンを接続します。

④ [OUTPUT](L、R) 端子 (RCA ピンジャック)

アナログオーディオ信号を出力します。フォステクス PMO.4n などのパワードモニターやオーディオアンプのラインレベルの入力端子に接続します。 [PHONES] 端子にヘッドフォンを接続すると、 [OUTPUT] (L, R) 端子からは信号が出力されません。


⑤ [USB] 端子

付属の USB ケーブルを使ってパソコンと接続します。

[USB] 端子を経由して、パソコンのデジタルオーディオ出力信号が入力されるとともに、電源が供給されます。接続すると、パソコンが本機を認識し、自動的にサウンド出力装置として本機を登録します。

<注意>: 安定した電源供給を得るために、パソコンとの接続は、USB ハブを経由せずに直接接続してください。

接続例

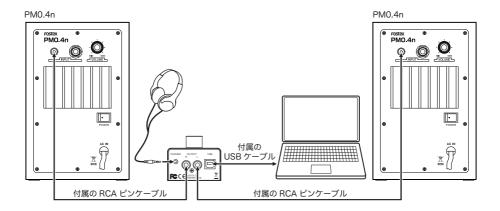

<注意 > : PC100USB とパソコンやオーディオ機器の接続を行うときは、オーディオ機器の出力ボリュームおよび PC100USB のボリュームを最小にしてください。

<Memo>: [PHONES] 端子にヘッドフォンを接続すると、[OUTPUT] (L, R) 端子からは信号が出力されません。

パソコンの条件

本機と接続するパソコンは以下の条件を満たしていることが必要です。

- USB2.0 対応の USB ポートを装備。
- ●パソコンの OS: Windows XP、Windows Vista、Windows 7、Mac OS X 以上

パソコンの設定

出力装置設定

パソコンのサウンド出力を USB 経由で本機に入力 するには、パソコンのサウンド出力先として本機を 選択する必要があります。

以下に OS 別にパソコンのサウンド出力装置の選択 方法を説明します。

Mac OS

 アップルメニューから「システム環境設定」を 選択します。



2)「サウンド」項目を選択して「サウンド」画面を 開き、画面上部の「出力」タブを選択します。



3)「サウンドを出力する装置の選択」リストから "USB Audio DAC"を選択します。



Windows Vista/Windows 7

- 1) コントロールパネルから「ハードウェアとサウンド」を選択します。
- 2)「サウンド」を選択し、「サウンド」画面を開きます。
- 3) この画面の「再生」タブを選択します。
- 4) 再生デバイスとして "USB Audio DAC" を選択し、「既定値に設定」ボタンをクリックし、「OK」ボタンをクリックします。



Windows XP

- 1) コントロールパネルから「サウンドとオーディ オデバイスのプロパティ」を選択します。
- 2)「サウンドとオーディオデバイスのプロパティ」 画面で「オーディオ」タブを選択します。
- 「音の再生」の「既定のデバイス」として "USB Audio DAC" を選択し、「OK」ボタンをクリックします。



パソコンの設定

詳細設定

パソコン側のサウンド出力設定を適切に行うことによって、より良い条件でサウンドをモニターすることができる場合があります。

パソコンの OS によって設定項目や設定方法が異なります。ここでは各 OS ごとの設定画面を紹介します。詳細についてはパソコンの取扱説明書やヘルプ画面をご覧ください。

Mac OS

「アプリケーション」フォルダ内の「ユーティリティ」フォルダ内の「Audio MIDI設定」ユーティリティで、サンプリングレート、ビットレート、左右の音量など詳細を設定することができます。



Windows Vista/Windows 7

「サウンド」画面内の「プロパティ(P)」ボタンをクリックして、詳細を設定します。サンプリングレートなどを設定することができます。



Windows XP

「サウンドとオーディオディバイスのプロパティ」 画面内の「詳細設定」ボタンをクリックして、スピーカー設置方法などの詳細を設定します。Windows XPでは再生サンプリングレートはアプリケーションの設定に従います。

出力レベル設定

パソコンのサウンド出力レベルを最大に設定すると、最高の音質を得ることができます。

仕様

接続端子

- [USB] 端子:
 - コネクター:USB コネクター B 対応サンプリング周波数 (Hz)/ ビット長:32k、 44.1k、48k/16 ビット
- [OUTPUT (L, R)] 端子: コネクター:RCA ピンジャック 適合負荷インピーダンス:10kΩ 以上 基準出カレベル:6dBV(0dBFS)
- ●[PHONES] 端子: コネクター:ø3.5mm ステレオミニジャック 適合負荷インピーダンス:32Ω以上 最大出力:5mW + 5mW(32Ω負荷、 THD:0.5%以下)

一般

- 電源:USB バスパワー (5V、500mA)
- 消費電力: 最大 2.5W
- ●外形寸法:66(幅)x 44(高さ)x 70(奥行き)mm (足を含まず)
- 本体質量:約190g(本体のみ)
- 付属品: 取扱説明書 x 1、USB2.0 ケーブル (AB タイプ) x 1、RCA ピンケーブル x 2
- *製品の外観および規格などは、改良のため予告なく変更することがあります。

アフターサービスについて

- ●この説明書裏には、保証書が印刷されています。 お買い上げの際に、販売店で所定の事項を記入し てお渡しします。記載内容をお確かめの上、大切 に保管してください。
- ●保証期間は、お買い上げ日から1年です。期間中は保証書の規定に基づいて、当社サービス部門が修理いたします。詳細については、説明書裏に印刷されている「無償修理規定」をお読みください。
- ●保証期間を過ぎてしまった場合、または保証書を 紛失した場合の修理については、お買い上げの販 売店、または当社営業窓口/サービス部門へご相 談ください。
- ●保証期間を過ぎてしまった場合でも、修理によって製品の機能が維持できる場合には、お客様のご要望により、有料修理いたします。

- ●この製品の補修用性能部品(製品の機能を維持するために必要な部品)の最低保有期間は、製造打ち切り後6年です。
- ●当社営業窓口、およびサービス部門の連絡先は、 以下のようになっています。お気軽にご相談くだ さい。

国内営業窓口

☎ 042-546-3151、FAX. 042-546-3198 土日・祝日および当社指定休日を除く AM 10:00~12:00、PM 1:00~5:00

無償修理規定について

- 1. 取扱説明書の注意書きに従った正常な使用状態で、保証期間内に故障が発生した場合には、弊社サービス部門が無料修理いたします。
- 2. 保証期間内に故障して無料修理を受ける場合は、
 - (1) 製品と保証書をご持参の上、本製品の取扱代 理店、または弊社サービス部門へ修理をご依頼ください。
 - (2) 離島および離島に準ずる遠隔地への出張修理を行った場合は、出張に要する実費を申し受けます。
- 3. ご贈答品などで所定事項の記入がない場合、電源周波数の異なる地域へのご転居の場合には、 弊社サービス部門へご相談ください。
- 4. つぎの場合には、保証期間内でも有料修理となります。
 - (1) ご使用上の誤り、および不当な修理や改造による故障および損傷。
- (2) お買い上げ後の輸送・移動・落下などによる 故障および損傷。
- (3) 火災・地震・水害・落雷その他の天災地変、 公害や異常電圧による故障および損傷。
- (4) 接続している他の機器に起因する故障および 損傷。

- (5) 異常磨耗、異常損傷を除き、自然消耗と見なされた消耗部品による故障および損傷。
- (6) 特殊業務、または特に苛酷な条件下において 使用された場合の故障および損傷。
- (7) 電源周波数の変更、およびメンテナンス。
- (8) 保証書のご提示がない場合。
- (9) 保証書にお買い上げ年月日、お客様名、取り扱い店(印)の記入がない場合、あるいは字句を書き換えられた場合。
- 5. 保証書は、日本国内のみにおいて有効です。
 This quarantee is valid only in Japan.
- 6. 保証書は再発行いたしません。紛失しないよう 大切に保管してください。
- ※ この保証書は、本書に明示した期間・条件のもとにおいて、無料修理をお約束するものです。したがって、この保証書によってお客様の法律上の権利を制限するものではありませんので、保証期間経過後の修理などについてご不明な場合は、本製品の取り扱い店、または弊社サービス部門へお問い合わせください。
- ※保証期間経過後の修理、補修用性能部品の保有期間については、前述の「アフターサービスについて」をご覧ください。

FOSTEX

保証書

このたびフォステクス製品をお買い上げいただきまして、誠にありがとうございま す。厳格な検査を経てお手元にお届けしておりますが、お客様の正常な使用状態で 故障が発生した場合には、保証書記載内容により無償で停理いたします。 本書をご提示の上、取扱販売店または当社営業窓口へ修理をご依頼ください。

保証期間1年 機種名 型 番 **PC100USB** 機番

フォステクス カンパニー 〒196-0021 東京都昭島市武蔵野3-2-35 20 042-545-6111 (代)



- で ご氏名 お買い上げ日 平成 年 月 日 版 店 名 売 住 所 店 電 話
- ・ご販売店様へのお願い 必ず太枠内の所定事項を記入捺印の上、お客様にお渡しください。 ・お客様へのお願い 保証期間内に無料修理を受ける場合、太枠内の記載がないときには、 「解収書」または「納品書」などといっしょに本業を提出してください

ご住所



Owner's Manual

PC100USB

Volume Controller



CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK).

NO USER - SERVICEABLE PARTS INSIDE.

REFER SERVICING TO QUALIFIED SERVICE PERSONNEL



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

"WARNING"

"TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE."

Safety instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- Do not block any ventilation openings.
 Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.

12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) Excessive sound pressure from earphones and headphones can cause hearing loss.

Table of contents
Safety instructionsE-2
Table of contents E-3
IntroductionE-3
Overview
Supplied accessories E-3
About power supply E-3
FCC (U.S.A.) & ICES-003 (Canada)
Information E-3
Names and functions
Top panelE-4
Rear panelE-4
Connection example E-5
Computer requirements E-5
Computer settings
Output device setting
Mac OS E-6
Windows Vista/Windows 7 E-6
Windows XP E-6
Detail settings
Mac OSE-7
Windows Vista/Windows 7 E-7
Windows XP E-7
Computer sound volumeE-7
SpecificationsE-7
Declaration of EC Directive E-8
Fostex distributors list in Europe E-8

Introduction

Thank you very much for purchasing the Fostex PC100USB.

To ensure the best performance, read this manual thoroughly before using the unit. Keep this manual handy for future reference.

Overview

The Fostex PC100USB is a volume controller that allows you to control the audio volume at your hand when you monitor the computer audio output through a pair of powered monitor speakers such as the Fostex PM0.4n (or an audio system) or headphones.

The PC100USB receives a digital audio signal from a USB-connected computer and converts it to an analog signal. The converted signal is then volume-controlled and fed from the analog line output connectors as well as the headphones output connector.

<Caution>:Turning the volume setting too high is strongly discouraged. Not only is it potentially harmful to your ears, it may blow out the speakers.

Supplied accessories

The following are supplied with the PC100USB.

- USB cable x 1
- Rubber feet x 4
- Owner's manual (this manual)

The following are supplied with the PC100USB.

- USB cable x 1
- RCA plug cable x 2
- Owner's manual (this manual)

After purchasing the PC100USB, check all accessories are included in the package.

About power supply

The PC100USB runs on USB bus power, so you can use it simply by connecting it to a computer with a supplied USB cable.

FCC (U.S.A.) & ICES-003 (Canada) Information

1. IMPORTANT NOTICE

This product, when installed as indicated in the instructions contained in this manual, meets FCC and ICES-003 requirements. Changes or modifications not expressly approved by Fostex Company for compliance could void the user's authority to operate the equipment. **DO NOT MODIFY THIS PRODUCT.**

2. IMPORTANT

In order to comply with FCC and ICES-003 requirements, use high quality shielded cables for connection to accessories and / or another products. If any cables are supplied with this product, they MUST be used. Follow all installation instructions. Failure to do so could void your FCC / ICES-003 authorization to use this product in the USA / Canada.

3. NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

4. Compliance with Part 15 of FCC Rules and Canadian ICES-003.


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that many cause undesired operation.

This Class B digital apparatus complies with Canadian ICES-003.


Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Names and functions

Top panel

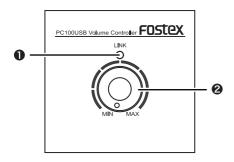

Rear panel

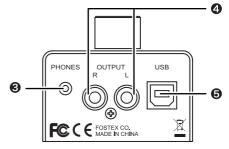

1 [LINK] indicator

It lights in green when the unit is connected to a computer with a USB cable and the computer recognizes the unit.

[VOLUME] control

Adjusts the output level of both the [PHONES] and [OUTPUT] connectors.

[PHONES] connector (stereo mini jack)

Connects stereo headphones.

② [OUTPUT] (L and R) connectors (RCA jacks)

These connectors output analog audio signals. They are used to connect to a pair of powered monitor speakers such as the Fostex PM0.4n (or an audio system).

When the [PHONES] jack is plugged in, no signal is output from the [OUTPUT] (L, R) jacks.


(3) [USB] connector

Connects to a computer using a supplied USB cable. Via USB, the PC100USB not only receives a digital audio signal but also gets power (USB bus power) from a computer.

After USB connection is made, the computer recognizes the PC100USB and automatically adds it to the list of sound output devices.

<Note>:To get stable power supply, connect a USB cable directly to a USB port of your computer, without using a USB hub.

Connection example

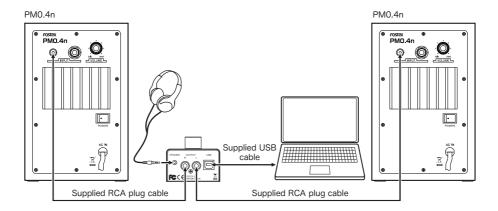

<Caution>:Before you connect the PC100USB to a computer or audio equipment, turn down the output volume of the audio equipment and the PC100USB.

<Memo>:When the [PHONES] jack is plugged in, no signal is output from the [OUTPUT] (L, R) jacks.

Computer requirements

You can connect a computer that meets the following requirements.

- A USB 2.0 port is provided.
- OS: Windows XP, Windows Vista, Windows 7, Mac OS X

Computer settings

Output device setting

To receive a digital audio signal from your computer via USB, you must make audio output setting of the computer appropriately.

The following describes how to select the PC100USB as the sound output device of a computer for each OS.

Mac OS

1) Select "System preferences" from the Apple drop-down menu.



2) Select "Sound" to open the "Sound" window and select "Output" tab at the top of the window.



3) Select "USB Audio DAC" in the list box.




Windows Vista/Windows 7

- 1) Select "Hardware and Sound" from the Control panel.
- 2) Select "Sound" to open the "Sound" window.
- 3) Select "Playback" tab.
- 4) Select "USB Audio DAC" and click the "Set Default" button, followed by the "OK" button.



Windows XP

- 1) Select "Sound and Audio Device Properties" from the Control panel.
- 2) Select "Audio" tab in the "Sound and Audio Device Properties" window.
- 3) Select "USB Audio DAC" as the default device for playback and click the "OK" button.

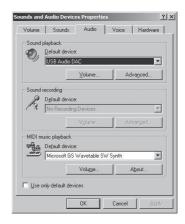

Computer settings

Detail settings

By making sound output settings on a computer appropriately, you may be able to monitor the sound better.

Depending on a computer OS, the setting window differs. The following briefly introduces the setting window for each OS. See the computer manual or help screen for details.

Mac OS

The "Audio MIDI setting" utility in the Utility folder in the Application folder allows you to select the sampling rate, bit rate, levels of left and right channels, etc.



Windows Vista/Windows 7

Clicking the "Property" button on the "Sound" window opens the window where you can select the sampling rate, etc.



Windows XP

Clicking the "Advanced" button on the "Sound and Audio Device Properties" window opens the setting window. Note that, with Window XP, the sampling rate conforms to the setting on a software application.

Computer sound volume

By setting the sound volume playing through your computer at maximum, you can get the optimum sound quality.

Specifications

Connectors

[USB] connector

- Connector type: USB Type B
- Sampling frequency (Hz)/Bit rate: 32k, 44.1k, 48k/16 bit

• [OUTPUT (L, R)] connectors

- Connector type: RCA jack
- Nominal output level: 6 dBV
- Applicable load impedance: 10k ohms

• [PHONES] connector

- Connector types: 3.5 mm stereo mini jack
- Maximum output power: 5 mW + 5 mW (32 ohms load, THD < 0.5%)
- Applicable load impedance: 32 ohms or more

General

- Power requirement: USB bus power (5 V, 500 mA)
- Max power consumption: 2.5 W
- External dimensions: 66 (W) x 44 (H) x 70 (D) mm (excluding feet)
- . Weight: Approximately 190 g
- Supplied accessories: USB 2.0 cable (Type A male to Type B male, x 1), RCA plug cables (x 2), Owner's manual (x 1)
- *Specifications and appearance are subject to change without notice for product improvement.

Declaration of EC Directive

This equipment is compatible with the EMC Directive (2004/108/EC) - Directive on approximation of member nation's ordinance concerning the electromagnetic compatibility and with the Low Voltage Directive (73/23/EEC) - Directive on approximation of member nation's ordinance concerning electric equipment designed to be used within the specified voltage range.

The Affect of Immunity on This Equipment

The affect of the European Specification EN61000-6-1 (coexistence of electromagnetic waves - common immunity specification) on this equipment are as shown below.

In the electrical fast transient/burst requirements, surge, conducted disturbances by radio-frequency fields, power frequency magnetic field, radiate electromagnetic field requirements and static electricity discharging environment, this could be affected by generation of noise in some cases

FOSTEX DISTRIBUTORS LIST IN EUROPE

Including non-EU countries (as of March 2011)

<AUSTRIA>

NAME: Mega Audio GmbH

ADD: Stromberger Str. 32, D-55411 Bingen, Germany TEL: (+49) 6721-94330, FAX: (+49) 6721-32046

<BELGIUM>

NAME: General Audio

ADD: Raymond Pelgrimslaan 101, B-1702 Groot-Bijgaarden,

TEL: (+32) 2-4630650, FAX: (+32) 2-4661500

∠RIII GARIA>

NAME: Shark Art

ADD: 15 Hristo Popovich Str., Varna 9000, Bulgaria TEL: (+359) 52-600172, FAX: (+359) 52-250578

NAME: Praha Music Center spol s.r.o.

ADD: Ocelarska 937/39, Praha 9, 190 00, Czecho

TEL: (+420) 226-011-111, FAX: (+420) 226-011-112

<DENMARK>

NAME: Benum Nordic A/S

ADD: Meterbuen 18, Skoylunde, 2740 Denmark TEL: (+45) 4451-8900, FAX: (+45) 4451-8911

<FINLAND>

NAME: Noretron Oy Audio

ADD: P. O. Box 22, FIN-02631 Espoo, Finland TEL: (+358) 9-5259330, FAX: (+358) 9-52593352

<FRANCE>

NAME: Sennheiser France

ADD: 128 bis, avenue Jean-Jaures, 94851 lvry-sur-Seine Cedex,

France

TEL: (+33) 1 4987 0300, FAX: (+33) 1 4987 0324

<GERMANY>

NAME: Mega Audio GmbH

ADD: Stromberger Str. 32, D-55411 Bingen, Germany TEL: (+49) 6721-94330, FAX: (+49) 6721-32046

<GREECE>

NAME: Bon Studio S. A.

ADD: 6 Zaimi Street, Exarchia, 106.83 Athens, Greece

TEL: (+30) 210-3809-605, 606, 607, 608 FAX: (+30) 210-3845-755, 210-3827-868

<HUNGARY>

NAME: ATEC Hungary Kft

ADD: H-110/ Budapest, Fogado u. 3, Hungary TEL: (+36) 1-4319005, FAX: (+36) 1-4319006

<ICELAND>

NAME: I. D. elrf. electronic Ltd.

ADD: ARMULA 38 108 REYKJAVIK, ICELAND TEL: (+354) 588 5010, FAX: (+354) 588 5011

NAME: Proel S. p. A.

ADD: Zona Via Alla Ruenia, 37/43 64027 - Sant'Omero (Teramo), Italy

TEL: (+39) 0861-81241, FAX: (+39) 0861-887862

<THE NETHERL ANDS>

NAME: IEMKE ROOS AUDIO B. V.

ADD: Kuiperbergweg 20, 1101 AG Amsterdam, The Netherlands TEL: (+31) 20-697-2121, FAX: (+31) 20-697-4201

<NORWAY>

NAME: Siv. Ing. Benum AS

ADD: P. O. Box 145, Vinderen, 0319 Oslo, Norway TEL: (+47) 2213 9900, FAX: (+47) 2214 8259

<POLAND>

NAME: Mega Music Spolka z o.o

ADD: Ul. Lesna 15, 81-876 Sopot, Poland TEL: (+48) 58-551-18-82, FAX: (+48) 58-551-18-72

<SPAIN>

NAME: Letusa S. A.

ADD: C/Laguna 10, 28923 Alcorcon, Madrid, Spain

TEL: (+34) 91-4862800, 91-4470898, FAX: (+34) 91-6414597

<SWFDFN>

NAME: Benum Nordic A/S

ADD: Aldermansvagen 17, 171 48 Solna, Sweden

TEL: (+46) 8 207710

<SWITZERLAND>

NAME: Audio Bauer Pro AG

ADD: Bernerstrasse-Nord 182, CH-8064 Zurich, Switzerland

TEL: (+41) 1-4323230, FAX: (+41) 1-4326558

<UK>

NAME: SCV London

ADD: 40 Chigwell Lane, Oakwood Hill Industrial Estate, Loughton,

Essex IG10 3NY U. K.

TEL: (+44) 20-8418-0778, FAX: (+44) 20-8418-0624

FOSTEX FOSTEX CO.

3-2-35, Musashino, Akishima-shi, Tokyo Japan, 196-0021

© PRINTED IN CHINA July 2011 8289677100 542338